

**4800P PA E-SAFETY INSPECTION PROGRAM  
BAR CODE RESET COMMAND**

The 4800P Bar Code reader is preconfigured to function with the PennDOT e-SAFETY application.

Simply plug the Bar Code reader into the PC's USB port and it is ready to use. Please refer to the PennDOT e-SAFETY Tutorials and/or Help Documentation for additional instructions.

Should the Bar Code reader not function properly the user may scan the bar code below to reset scanner to the e-SAFETY application defaults

DEFAULT;TERMID124;TRGMOD3.

