

FOR USE WITH THE 4810 ONLY
CHANGE PNAME & PID FOR SIGNED DRIVER SUPPORT


Scanner Configuration:



1. Connect the 4810 imaging scanner to the 61206202-02E USB Interface Cable, and the interface cable to the USB port on the computer.
2. Scan the following codes sequentially:



UNLOCK

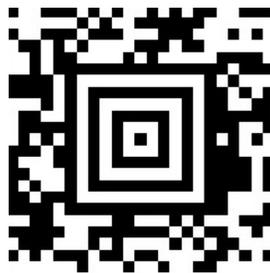

PName 4800dr
PID 04EA

3. **After the 4810 confirms with a three tone beep, Unplug the 4810.**

Continued on Page 2

FOR USE WITH THE 4810 ONLY
CHANGE PNAME & PID FOR SIGNED DRIVER SUPPORT

4. Copy the signed USB Com driver zip file to the desktop, unzip to a folder in a convenient location.
5. There is a “getting started” guide in the folder for installation, review the details on the installation process.
6. Using a command prompt or windows explorer, navigate to the folder where you unzipped the driver file to either the _x86 folder for 32 bit OS installation, or _X64 folder for 64 bit OS, then start the appropriate batch file to install the new driver.

NOTES:

- i. **Do NOT use this sheet on any other scanner than the 4810LR.**
- ii. Modifying the PID and PNAME can make your device **inoperable**, there will be a charge to correct any abuse of these barcodes.

