



Configuring the PocketJet Printer for Perforated Paper

Follow these instructions to configure the PocketJet printer to use perforated paper.

1. From the *Windows Start Menu* select *Control Panel* and then select *Devices and Printers*.
2. Locate the icon for the PocketJet Printer and right click on it. You will see a pop-up menu as shown below. Select *Printing preferences*.

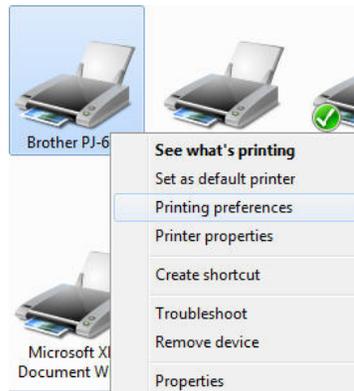


3. In the Printing Preferences dialog box shown below, click on the button labeled *Advanced...*

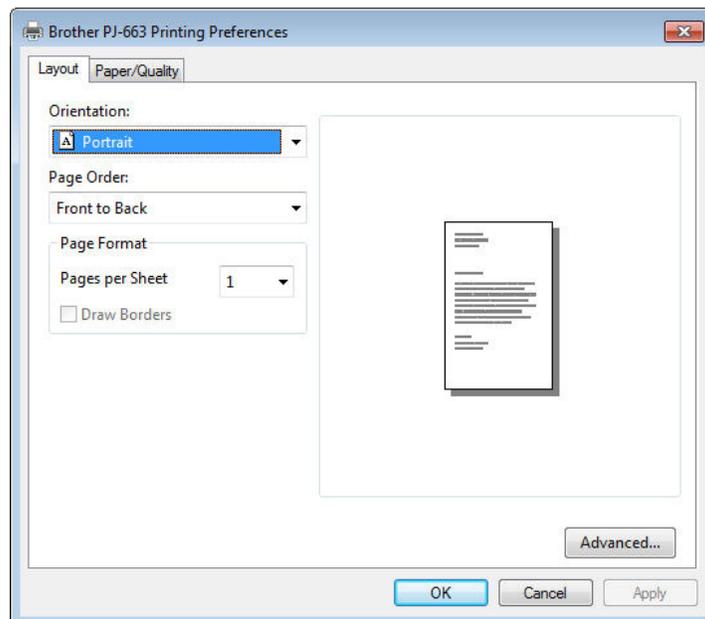


Configuring the PocketJet Printer for Perforated Paper

4. In the drop down box labeled *Form Feed Mode* select *End of Page* as shown below.

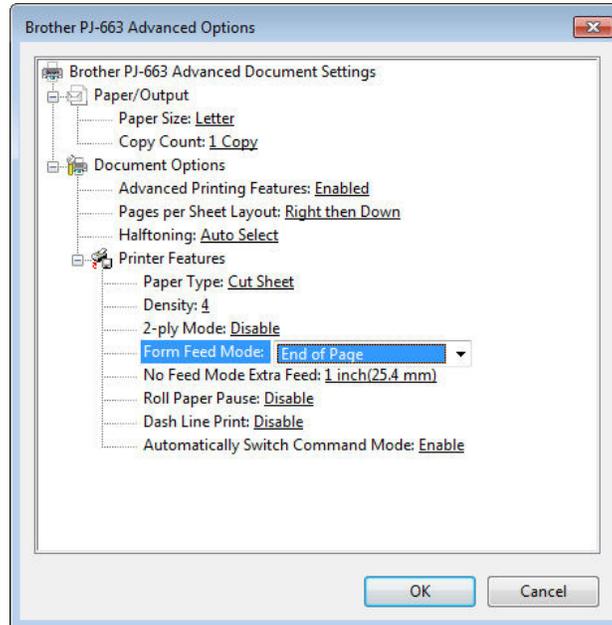

5. In the drop down box labeled *Paper Type* select *Perforated Roll* as shown below.

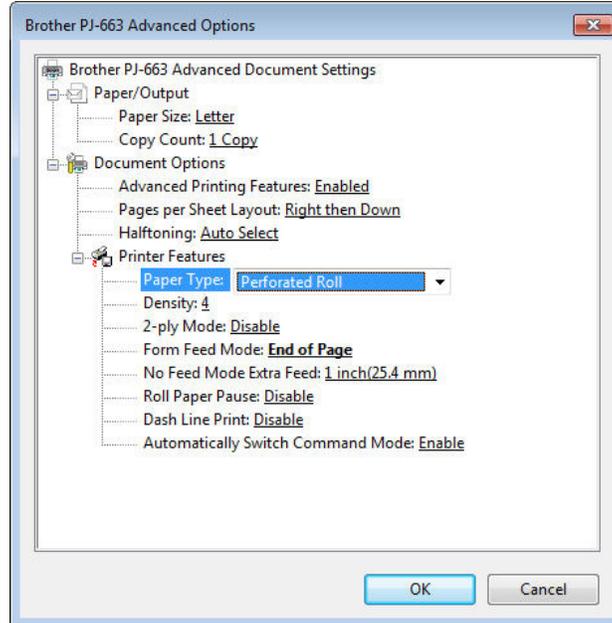

6. Click the *OK* button on the *Advanced Options* dialog box and then click the *OK* button on the *Printing Preferences* dialog box.